



**INSTALLATION INSTRUCTIONS**

**GT1301 – FOLDING TABLE W/ RESIN TABLE TOP**

**CARTON #1 CONTENTS**


ITEM	QUANTITY	DESCRIPTION
A	1	TOP BRACKET - 48" WIDE
B	1	BOTTOM BRACKET -
C	2	FOLDING ARM ASSEMBLIES
-	8	NUTS, WASHERS, YELLOW CAPS

**CARTON # 2 CONTENTS**

QUANTITY	DESCRIPTION
1	TABLE TOP – 2FT X 4 FT
2	STIFFENERS
8	SCREWS – 1"

**TOOLS REQUIRED - PHILLIPS SCREW DRIVER / PLIERS**  
**OPTIONAL FOR EASIER ASSEMBLY: ELECTRIC DRIVER, PHILLIPS DRIVER BIT,**  
**3/32" DRILL BIT, SOCKET WRENCH SET.**

## FOLDING TABLE W/ RESIN TOP - ASSEMBLY INSTRUCTIONS

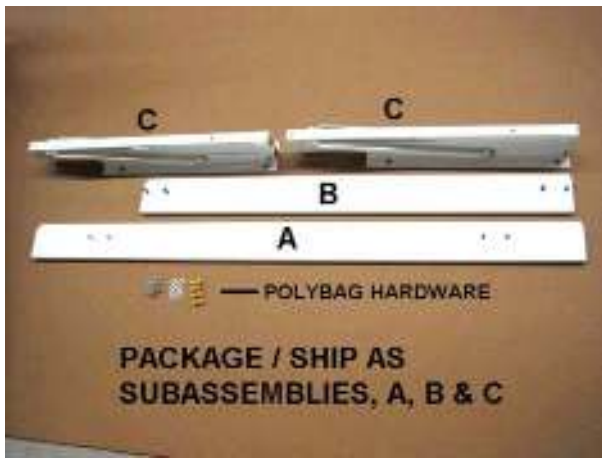

STEP #1: CHECK CONTENTS OF BOTH CARTONS




STEP #2: PLACE TOP BRACKET (A) THE DESIRED DISTANCE FROM THE FLOOR. MOUNT THE 2 FOLDING ARM ASSEMBLIES (C) ON THE TOP BRACKET AND FASTEN WITH THE SUPPLIED NUTS, WASHERS & YELLOW END CAPS AS SHOWN. HAND TIGHTEN NUTS ONLY



STEP #3: MOUNT BOTTOM BRACKET (B) AND FASTEN WITH THE SUPPLIED NUTS, WASHERS & YELLOW CAPS AND WRENCH TIGHTEN THE TOP NUTS.

STEP #4: PLACE THE 2 STIFFENERS ON THE UNDER SIDE OF THE TABLE TOP AS SHOWN.

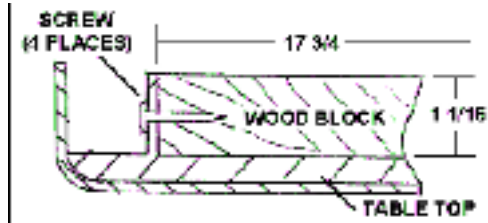

**STEP #5**



**STEP #6**

**STEP #5: FASTEN THE STIFFENER ENDS W/ THE SUPPLIED SCREW AS SHOWN IN 4 PLACES. THE TOP OF THE STIFFENERS ARE TO BE FLUSH WITH THE RIBS AT EACH END.**

**STEP #6: PLACE THE TABLE TOP BACK EDGE IN LINE WITH FOLDING BRACKET ASSEMBLY AS SHOWN. (THIS IS IMPORTANT SO THE TABLE TOP CAN BE "LIFTED" TO DOWN INTO THE FOLDED POSITION.)**



**STEP #7**



**THIS COMPLETES THE GT1301 ASSEMBLY.**

**STEP #7: WITH THE SUPPLIED 1" SCREWS, FASTEN THROUGH THE REAR 2 HOLES IN EACH BRACKET ASSEMBLY INTO THE STIFFENER PREVIOUSLY INSTALLED ON THE TABLE TOP IN STEP #5..**

## FOLDING TABLE OPERATION



### DIAGRAM OF OPERATING STEPS

